

Light Indicators

Therapy Modes Overview





NeoSurround offers a variety of therapy programs designed to support your well-being in different areas of life. Each mode is represented by a specific light color, so you can easily recognize which program is active.

● Enhancing Mental Capabilities (Lime)	Supports focus, concentration, and cognitive performance.
● Energy and Vitality (Lime)	Helps you recharge and feel more energized.
○ Deep Relaxation (Antique White)	Encourages calmness and stress relief.
● Sleep 1 (Deep Pink)	Promotes falling asleep more easily.
● Sleep 2 (Deep Pink)	Supports deeper, continuous sleep.
● Pain Control (Golden Rod)	Designed to help relieve discomfort and ease tension.
● Meditation Theta (Light Pink)	Assists in reaching deeper meditative states.
● Meditation Calming and Sync (Light Pink)	Promotes inner balance and calmness.
● Custom Program (Green)	Allows you to create and save your own program.
● Lucid Dreaming (Deep Pink)	Supports dream awareness and deep rest.
● Focus Meditation (Light Pink)	Enhances concentration during meditation.
● Mindful Meditation (Light Pink)	Encourages mindfulness and present awareness.
● Quiet Mind (Light Pink)	Helps calm racing thoughts.
● Open Heart (Light Pink)	Promotes emotional openness and balance.
● 24 Hours (Green)	Continuous support throughout the day.

Note: While a program is active, the light on NeoSurround will display a solid color in the program's designated shade.




System Status Lights

NeoSurround uses different light colors to show its current status:

 Cyan (Fast Circle)	The device is starting up (booting).
 Blue (Solid)	Bluetooth is disabled.
 Blue (Blinking)	Bluetooth is enabled, and the device is ready to connect.
 Light Yellow (Solid)	Bluetooth is enabled and successfully connected.

Error Status Lights

If NeoSurround detects an issue, the light will change color to indicate the type of error:

 Red (Fast Blinking)	Error. Please restart the device or contact support.
 Dark Orange (Blinking)	Incorrect power supply is connected. Use the original power adapter.
 Yellow (Slow Blinking)	Warning. The device may not be functioning properly — check connections and restart if needed.